

Programming when calling alarm receiver using Guided Confirmation

Disconnect motor room handset and connect telephone for programming
Connect 230 VAC
Push and hold Reset button until 3 beep is heard
Activate programming telephone
Push “#” to stop tones from TSA5100 Autodial

Program ID number:.....*0 <ID number> #
Program alarm telephone number:.....*1 <Telephone number> #
Program technical alarm number.....*4 <Telephone number> #
Program self test telephone number:.....*5 <Telephone number> **1 #
Activate motor room handset:.....**7*2#
Record location message:.....*7<location message>
(after 1 second silence the recording stops)
End programming with activation of test call:.....**#
(The TSA5100 AutoDial will after about 10 seconds perform a test call)
Remove programming telephone and reconnect motor room handset.

Press the emergency pushbutton in the cabin to test the alarm call and the 2 way communication.

Programming when calling alarm receiver using ABP protocol

Disconnect motor room handset and connect telephone for programming
Connect 230 VAC
Push and hold Reset button until 3 beep is heard
Activate programming telephone
Push “#” to stop tones from TSA5100 Autodial

Program ID number:.....*0 <ID number> #
Program alarm telephone number:.....*1 <Telephone number> **1 #
Program technical alarm number.....*4 <Telephone number> **1 #
Program self test telephone number:.....*5 <Telephone number> **1 #
Activate motor room handset:.....**7*2#
End programming with activation of test call:.....**#
(The TSA5100 AutoDial will after about 10 seconds perform a test call)
Remove programming telephone and reconnect motor room handset.

Press the emergency pushbutton in the cabin to test the alarm call and the 2 way communication.

Teletech a/s

Lift Alarm

TSA5100

AutoDial



PSTN

Quick Guide

Rev. 2.0 UK
18. December 2009

Overview

Figure 1: Front view


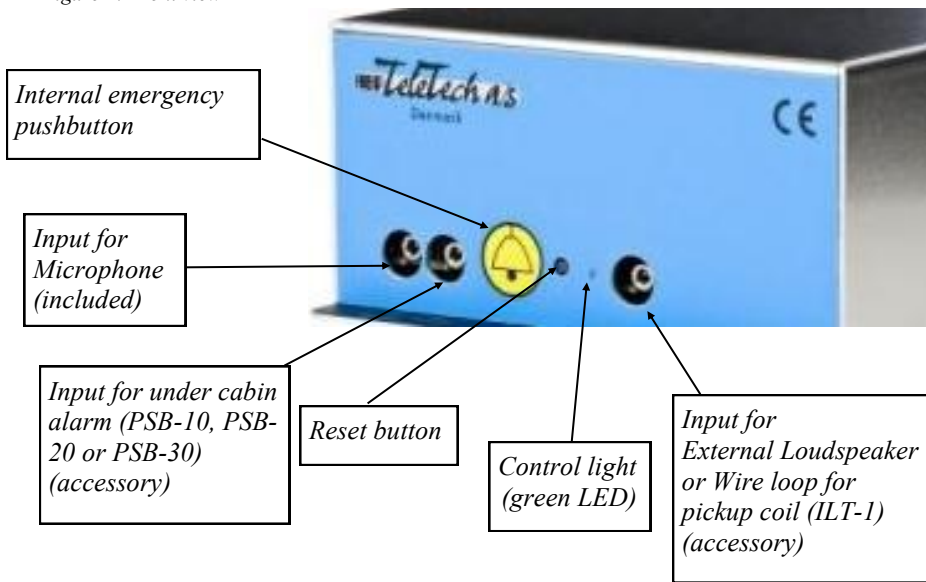


Figure 2: Rear view

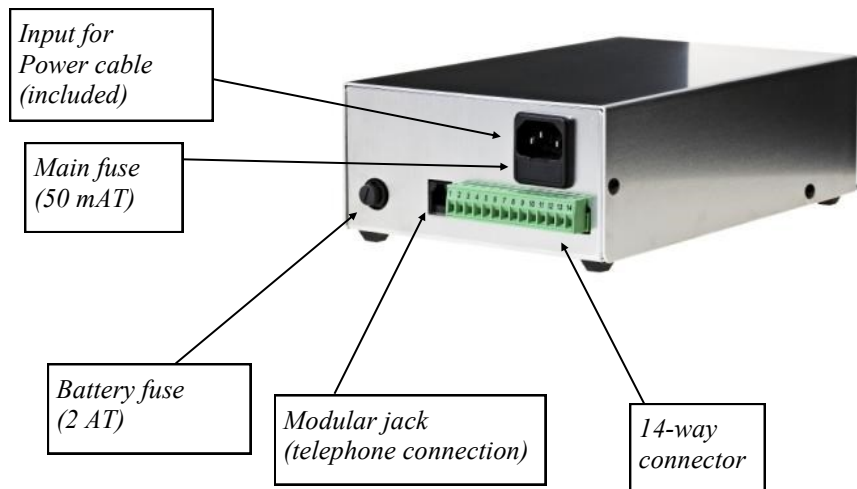

Connections

- Connect the microphone to the mini Jack socket on the front of the TSA5100 Autodial (see figure 1).
- Connect the telephone line to terminal 1 and 2 of the 14 way connector (see figure 3).
- Connect motor room handset to terminal 3 and 4 of the 14 way connector (see figure 3).
- Connect the cabins emergency pushbutton to terminal 5 and 6 of the 14 way connector (see figure 3).
- Connect any sounder (siren or bell) to terminal 11 and 12 of the 14 way connector (see figure 3). Please notice that an external power supply is required.
- Connect Green pictogram to terminal 14 and 5 of the 14 way connector (see figure 3).
- Connect yellow pictogram to terminal 13 and 5 of the 14 way connector (see figure 3).

Figure 3: 14 way connector

